COCONU WAVE BODY MASSAGER

User Manual


Specifications

- Size:1.96L"x1.45W"x3.26H"
- 3.7V polymer lithium battery, battery capacity 300mAh, run time 55 min, charging time 120 min
- Platinum grade silicone
- Water resistant
- No BPA, BPS, PVC or Phthalates
- USB Rechargeable
- 10 Vibration Settings

Getting Started

Coconu Wave ships with a partial charge though it may have depleted over time. Before first use, charge your Wave for a full two hours.

Make sure the charging plug is fully inserted into the charging jack (the jack is the dot above the "DC" logo on the side of the Wave). The indicator light will flash when charging and the light will be constant when fully charged.

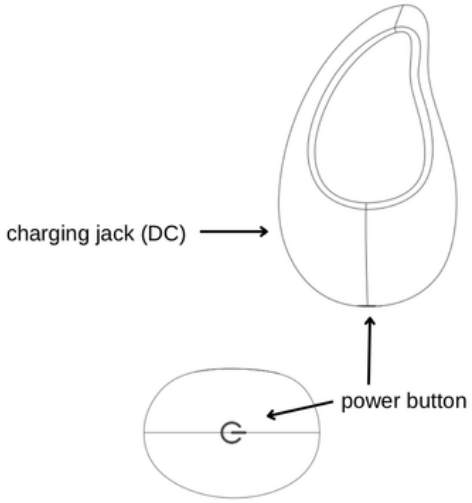

To Use

Turn on: Hold down the power button (located on the bottom of Coconu Wave) for 3 seconds to turn on. (The indicator light will illuminate while powered on.)
Turn off: Hold down the power button for 3 seconds to turn off.

Vibration Mode

Press the power button to clyce through the 10 vibration modes. The first mode is a consistent vibration, the second mode is a stronger consistent vibration, and the remaining 8 modes are different vibration patterns.

Care

Wash Coconu Wave (before initial use and) after every use, to prevent bacteria from building up. Wash with unscented soap and water and rinse thoroughly. (Or use a cleaner made for a personal massager.)

Safety

Do not charge near water.
Do ot press power button while charging.
Do not use silicone-based lubricants with Coconu Wave.
Do not clean Coconu Wave with products containing alcohol, petrol, or acetone.
Do not bake, boil, microwave or was Coconu Wave in a dishwasher.
Do not submerge Coconu Wave in water.

Lifespan

Coconu Wave is powered by a recharegable lithium-ion battery. The expected lifespan of is dependent on frequency of use.